

**LASER LINK GOLF's** only obligation under this warranty is to repair or replace the defective product or any part thereof, except batteries, when it is returned together with proof of date of purchase, transportation prepaid, to **LASER LINK GOLF** within one (1) year from the date of original purchase.

**To obtain warranty service, ship the product, or part thereof, together with proof of purchase and a note explaining the problem to:**

**Laser Link Golf  
Attn: Repair Department  
4027 Owl Creek Drive  
Madison, WI 53718**

**On the accompanying note, and any other correspondence, be sure to include the model number, your name, your phone number, and your return address.**

THERE ARE NO OTHER EXPRESS WARRANTIES OTHER THAN THOSE STATED HEREIN. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. LASER LINK GOLF SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. LASER LINK GOLF NEITHER ASSUMES NOR AUTHORIZES ANYONE TO ASSUME FOR IT ANY OTHER EXPRESS WARRANTY.

THIS WARRANTY DOES NOT APPLY TO ANY ACCESSORIES NOR TO ANY PRODUCT SUBJECTED TO MISUSE, NEGLIGENT OR ACCIDENTAL DAMAGE, IMPROPER SERVICE OR HANDLING, NOR TO ANY PRODUCTS ALTERED OR REPAIRED BY ANY PERSON OR COMPANY OTHER THAN LASER LINK GOLF.

**Authorized Service Center:**



4027 Owl Creek Drive • Madison, WI 53718 USA  
**Phone:** (608) 838-3100 • **Toll Free:** 866-909-4653  
[www.laserlinkgolf.com](http://www.laserlinkgolf.com)

**Does your golf course use our *SmartSticks*™?**



# *Lady* **Laser Link**

MODEL 9508B  
**Instruction Manual  
and Warranty Information**

## Simplifying your game!

You have purchased the fastest, simplest, and easiest to use rangefinder in golf! The Lady Laser Link Rangefinder is designed specifically for those who enjoy playing the game of golf, and it is so simple to operate that anyone from the newest beginner to the most experienced veteran, from a low handicapper to a high handicapper, can use it with ease. To learn more about the Lady Laser Link and the Laser Link Distance System, please read through the instruction manual.

### Included in this package:

(1) Lady Laser Link Rangefinder (1) Carrying Case (1) Nine-Volt Battery

## STARTING OUT

### The Battery


Your new rangefinder comes equipped with a 9-volt alkaline battery already installed. It should be ready to use right out of the box.

When the battery runs low on power, a low battery indicator (🔋) will appear on the left side of the LCD screen. When replacing the battery, use only a 9-volt alkaline battery. DO NOT use heavy duty or lithium batteries.


## OPERATING INSTRUCTIONS

The Lady Laser Link Rangefinder is a target specific laser that will only read yardages from Laser Link Golf's specially designed prism reflector. Because of this "target specific" design, the Lady Laser Link is so simple to use that you will be an expert the first time you use it. You will always get the reading to the flagstick (not the reading to the trees behind the green), even if your hands are not perfectly steady. The minimum range is 30 yards; the maximum range is 300 yards.

## BATTERY INSTALLATION

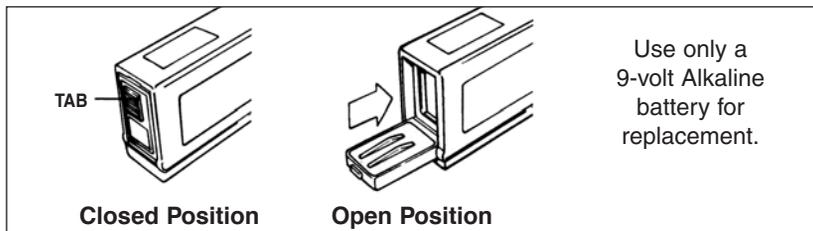

## One button does it all...

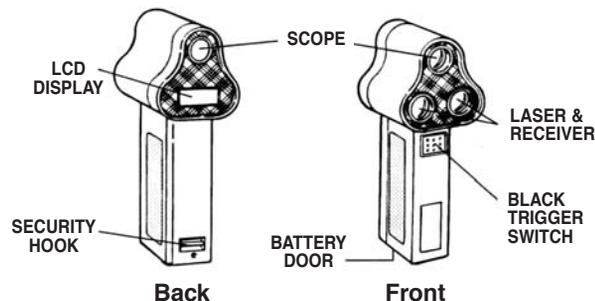

### To Use:

1. Hold the Lady Laser Link with the LCD screen facing you.
2. Bring the hand-held unit up to your eye. Aim the scope in the direction of your target.
3. **PRESS AND RELEASE** the white button located under your trigger finger. A red dot aiming reference will appear in the top scope. When the red dot is present, the laser is firing. Flashing "dashes" will also appear on the LCD screen indicating that the laser is firing. If the word "On" appears on the LCD, simply press and release the button again and the "dashes" will appear. The laser will transmit for 10 seconds.
4. Align the red dot just above the top of the flagstick, and slowly trace the red dot in an "up and down" motion along the full length of the flagstick. The reflector will either be on top of the flagstick, or directly below the flag. The unit will read a yardage when the laser hits the target reflector. There is no need to be perfectly steady, simply get close. DO NOT press the white button again and DO NOT hold down the button; simply press and release once, and scan the red dot along the target flagstick.
5. The unit will beep twice when your yardage has been calculated. Yardage measurement will be displayed for 6 seconds.

*\*NOTE: The red dot in the scope is simply an aiming reference, not the actual laser. By tracing the red dot down the length of the flagstick – you will then get familiar with the mechanism and be able to use the unit with ease.*

## **OPERATION NOTES**

- **Rapid Fire** – The Lady Laser Link Rangefinder has the capability for “rapid fire” use. You do not need to wait for a previous yardage measurement to clear the LCD screen prior to using again.
- **Auto Shutoff** – The Lady Laser Link Rangefinder has an automatic shutoff function that will automatically turn off the unit after approximately 6 seconds.
- **Weather Conditions** – Rain will affect performance only if the unit gets water on the inside, or if the rain is falling intensely enough so that it completely covers the reflector at all times.

Fog can have an effect on performance. The thicker the fog, the higher the chance for limited ranging capabilities.

Do not expose the rangefinder to extreme heat or extreme cold for long periods of time. Everyday use and travel are acceptable, and will not affect the rangefinder itself. However, long-term storage in extreme temperatures can have an effect on the rangefinder, battery performance, and/or battery life.

- **Water Resistance** – The Lady Laser Link casing is water resistant. DO NOT submerge the rangefinder in water.

## **MAINTENANCE**

- To clean the lenses and LCD screen, use a soft, clean cloth, such as you would use on eyeglasses. Both the lenses and the LCD can be scratched, so DO NOT use a hard-bristled brush. DO NOT use liquid of any type to clean these areas.
- It is recommended that the rangefinder be stored in its carrying case when not in use.

## **TROUBLESHOOTING**

Issues that you encounter with any of our Laser Link rangefinders are often easily solved without returning the unit to Laser Link Golf. In many cases, the remedy can be as simple as changing the battery, and we recommend that this be done prior to returning the product to Laser Link Golf.

### **The rangefinder is reading an incorrect yardage.**

- Replace the battery. Check to see if the low battery indicator (🔋) is present on the LCD screen. If there is not enough power being supplied to the rangefinder, yardage measurements may be compromised.

### **The rangefinder gets a reading only some of the time.**

- First, make sure the reflector is clean and free of any obstructions, including dirt, mud, or excessive calcium or salt buildup. Also make sure nothing is blocking the sending or receiving lenses of the rangefinder, such as your finger.
- In many cases, a slight change in user behavior that will make the unit work perfectly, and using the “Operating Instructions” procedure outlined earlier will often solve the problem. If you continue to have difficulties getting readings, please contact Laser Link Golf for help.

## **SPECIFICATIONS**

**Product:** Lady Laser Link

**Model:** 9508B

**Dimensions:** 5 5/8" x 2 3/16" x 3"

**Weight (with battery):** 6.5 ounces

**Class One Laser**

**Power Source:** 9 Volt Battery  
(alkaline only)

**Range:** 30 – 300 yards

(27 – 274 meters)

**Accuracy:** +/- 1%

**Display:** LCD

Carrying case included

## **ONE-YEAR LIMITED WARRANTY**

**LASER LINK GOLF** warrants to the original consumer purchaser thereof all parts of the **Lady Laser Link Rangefinder** to be free from defects in materials or factory workmanship for a period of one (1) year from the date of original purchase by the consumer. **LASER LINK GOLF** will, at its option, replace or repair this product or any part thereof, except batteries, if it proves to be defective under normal use and service within one (1) year from date of original purchase.