



# *QuickShot* 2.0

Model QS2514

## **Instruction Manual and Warranty Information**



**Don't forget to register your rangefinder.  
Visit [www.laserlinkgolf.com](http://www.laserlinkgolf.com) to learn the benefits.**

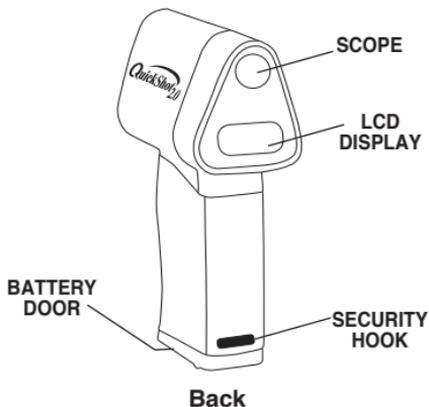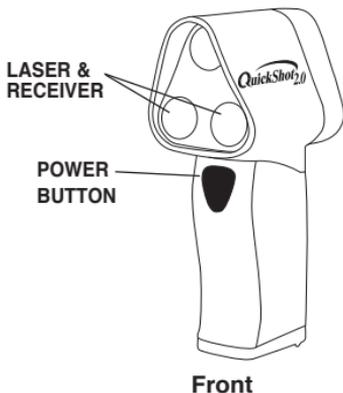

## **One button does it all...**


You have purchased the **fastest, simplest, and easiest** to use rangefinder in golf! The QuickShot 2.0 Rangefinder is designed specifically for those who enjoy playing the game of golf, and it is so simple to operate that anyone from the newest beginner to the most experienced veteran, from a low handicapper to a high handicapper, can use it with ease. To learn more about the QuickShot 2.0 and the Laser Link Distance System, please read through the instruction manual.

## **STARTING OUT**

### **The Battery**

Your new rangefinder comes equipped with a 9-volt alkaline battery. It should be ready to use right out of the box. When the battery runs low on power, a low battery indicator (  ) will appear on the left side of the LCD screen. When replacing the battery, use only a 9-volt alkaline battery. DO NOT use heavy duty or lithium batteries.

Be careful to install the battery in the correct direction, with the positive receptor closer to the front of the rangefinder. If the battery door does not close easily, the battery has been placed incorrectly.

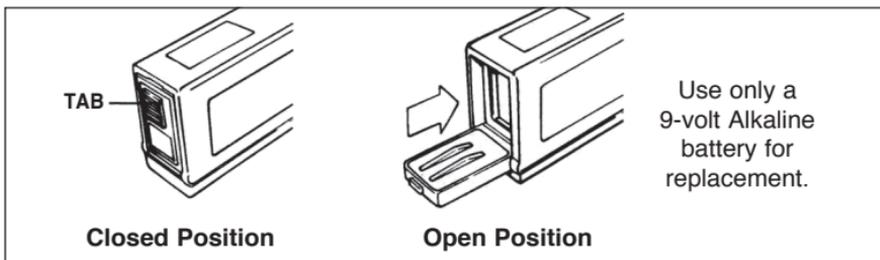

## **OPERATION INSTRUCTIONS**

The QuickShot 2.0 Rangefinder is a target specific laser that will only read yardages from Laser Link Golf's specially designed prism reflector. Because of this "target specific" design, the QuickShot 2.0 is so simple to operate that you will be an expert the first time you use it. You will always get the reading to the flagstick (not the reading to the trees behind the green), even if your hands are not perfectly steady. The minimum range is 25 yards; the maximum range is 400 yards.

### **To Use:**

1. Hold the rangefinder with the LCD screen facing you.
2. Bring the rangefinder up to eye level and aim the scope in the direction of your target. As you look through the scope, place your intended target inside the Zero-In Alignment circle.
3. To measure distance, PRESS and HOLD the power button located under your trigger finger. The red dot aiming reference will appear in the scope. Place the red dot inside the Zero-In Alignment circle so that your target, the circle, and the red dot are aligned.
4. RELEASE the power button to activate the laser. Your distance measurement will be displayed on the LCD. Measurement confirmation will be indicated depending on the chosen setting (Audio, Vibrate, or Silent).\*

**NOTE:** The red dot in the scope is simply an aiming reference, not the actual laser.

\*The flagstick reflector will be located either at the top of the flagstick, or just below the flag. To determine the reflector location, align the red dot just above the top of the flagstick and slowly trace the red dot down the length of the flagstick.

## **OPERATION NOTES**

- **Rapid Fire** – The QuickShot 2.0 Rangefinder has the capability for "rapid fire" use. You do not need to wait for a previous yardage measurement to clear the LCD screen prior to using again.
- **Auto Shutoff** – The QuickShot 2.0 Rangefinder has an automatic shutoff function that will turn off the unit after approximately 6 seconds.
- **Weather Conditions** – Rain will affect performance only if the unit gets water on the inside, or if the rain is falling intensely enough so that it completely covers the reflector at all times.

Fog can have an effect on performance. The thicker the fog, the higher the chance for limited ranging capabilities.

Do not expose the rangefinder to extreme heat or extreme cold for long periods of time. Everyday use and travel are acceptable, and will not affect the rangefinder itself. However, long-term storage in extreme temperatures can have an effect on the rangefinder, battery performance, and/or battery life.

- **Water Resistance** – The QuickShot 2.0 casing is water resistant, and is lined at all access points with rubber seals to help prevent water entry. DO NOT submerge the rangefinder in water.

## **ZERO-IN ALIGNMENT SYSTEM (ZAS)**

The QuickShot 2.0 rangefinder is equipped with the Zero-In Alignment System (ZAS). Using ZAS properly will help you to align the rangefinder with your intended target. See the OPERATING INSTRUCTIONS for proper usage guidelines.

## **MAINTENANCE**

- To clean the lenses and LCD screen, use a soft, clean cloth, such as you would use on eyeglasses. Both the lenses and the LCD can be scratched, so DO NOT use a hard-bristled brush. DO NOT use liquid of any type to clean these areas.
- It is recommended that the QuickShot 2.0 be stored in its carrying case when not in use.
- Use only a small amount of a mild soap and water solution to clean the silver casing. DO NOT use alcohol-based cleaners. DO NOT submerge in water or get the unit overly wet. DO NOT use abrasive cleaners.

## **TROUBLESHOOTING**

Issues that you encounter with any of our Laser Link rangefinders are often easily solved without returning the unit to Laser Link Golf. In many cases, **the remedy can be as simple as changing the battery**, and we recommend that this be done prior to returning the product to Laser Link Golf.

**The rangefinder is reading an incorrect yardage.**

- Replace the battery. Check to see if the low battery indicator (  ) is present on the LCD screen. If there is not enough power being supplied to the rangefinder, yardage measurements may be compromised.
- The Laser Link QuickShot 2.0 is capable of reading distance measurements in both yards and meters. Occasionally, a user will accidentally change the measurement setting from yards to meters (or from meters to yards), causing him/her to believe

the product is measuring incorrectly. You can determine if the product is measuring in meters by simply hitting the power button and noticing if a "Y" or an "M" appears on the screen. Instructions on how to change the setting are included in this manual.

### **The QuickShot 2.0 rangefinder gets a reading only some of the time.**

- First, make sure the reflector is clean and free of any obstructions, including dirt, mud, or excessive calcium or salt buildup. Also make sure nothing is blocking the sending or receiving lenses of the rangefinder, such as your finger.
- In many cases, a slight change in user behavior will make the unit work perfectly, and using the "Operating Instructions" procedure outlined earlier in the manual will often solve the problem. If you continue to have difficulties getting readings, please contact Laser Link Golf for help.

### **CHANGING MEASUREMENT SETTINGS**

There are six different measurement combinations for you to choose from. Distance settings include yards and meters, and confirmation feedback settings include Audio, Silent, and Vibrate. If you would like to change the QuickShot 2.0 measurement settings, please follow the instructions below.

1. Hold the QuickShot 2.0 with the LCD screen facing you.
2. PRESS AND HOLD the power button until the unit emits three fast beeps. This will take approximately sixty seconds. A countdown clock will appear on the LCD after ten seconds. After the third beep, release the power button.
3. Now you are able to cycle through the measurement and confirmation settings. Press and release the power button a few times. As you do this you will see various icons appearing on the LCD screen.
4. In order to program the QuickShot 2.0 to the setting that you desire, cycle through the settings until you reach the required combination. When you find your setting, simply release the power button and do not press it again. After approximately 5 seconds, you will here four beeps in rapid succession indicating that your setting has been changed.

## **Setting Descriptions**

**Y** – Yards

**M** – Meters

No speaker icon – Silent Mode

 – Audio Mode

 – Vibrate Mode

 – Low Battery

## **SPECIFICATIONS**

Product: ..... QuickShot 2.0

Model:..... QS2514

Dimensions: ..... 5.375" x 2" x 3.125"

Weight (with battery): ..... 6.4 ounces

Class One Laser

Power Source:..... 9 Volt Battery (alkaline only)

Range:..... 25 – 400 yards (23 – 366 meters)

Accuracy: ..... +/- 1 yard

Display: ..... External LCD

Carrying case and battery included

## **ONE-YEAR LIMITED WARRANTY**

LASER LINK GOLF warrants to the original consumer purchaser thereof all parts of the **QuickShot 2.0 Rangefinder** to be free from defects in materials or factory workmanship for a period of one (1) year from the date of original purchase by the consumer.

LASER LINK GOLF will, at its option, replace or repair this product or any part thereof, except batteries, if it proves to be defective under normal use and service within one (1) year from date of original purchase. LASER LINK GOLF's only obligation under this warranty is to repair or replace the defective product or any part thereof, except batteries, when it is returned together with proof of date of purchase, transportation prepaid, to LASER LINK GOLF within one (1) year from the date of original purchase.

To initiate warranty service, contact Laser Link Golf to obtain a RETURN AUTHORIZATION NUMBER (RAN) and a RETURN AUTHORIZATION FORM (RAF) that will be sent via e-mail. Write the RAN on the outside of the shipping box, and complete the RAF. **IMPORTANT:** The RAF must be completed in its entirety to ensure fast and accurate service. On any other correspondence, be sure to include the rangefinder serial number, your name, return address, phone number, and e-mail address. Warranty returns will not be processed without this information.

**Return item to: Laser Link Golf  
ATTN: Repair Department  
4027 Owl Creek Drive  
Madison, WI 53718**

THERE ARE NO OTHER EXPRESS WARRANTIES OTHER THAN THOSE STATED HEREIN. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. LASER LINK GOLF SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. LASER LINK GOLF NEITHER ASSUMES NOR AUTHORIZES ANYONE TO ASSUME FOR IT ANY OTHER EXPRESS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY ACCESSORIES NOR TO ANY PRODUCT SUBJECTED TO MISUSE, NEGLIGENT OR ACCIDENTAL DAMAGE, IMPROPER SERVICE OR HANDLING, NOR TO ANY PRODUCTS ALTERED OR REPAIRED BY ANY PERSON OR COMPANY OTHER THAN LASER LINK GOLF..

*The QuickShot 2.0 is sealed at the factory and cannot be opened. Any attempt to open the case will damage the unit and this damage will void the Limited Warranty.*



4027 Owl Creek Drive, Madison, WI 53718  
Phone: (608) 838-3100 • 866-909-4653  
[www.laserlinkgolf.com](http://www.laserlinkgolf.com)